



QUICK SETUP MANUAL

Congratulations on the purchase of Your Picobook Pro !

Please read the manual carefully before you start using your Picobook Pro.

Your Picobook Pro comes securely packaged in a sturdy cardboard shipping carton. Upon receiving your Picobook Pro, open the carton and carefully remove the contents. In addition to this Quick Setup Manual, the shipping carton should also contain the following items:

- The Picobook Pro
- An AC Adapter and AC Power Cord
- Li-Ion Battery Pack
- CD with Driver Utility and User Manual

Carefully inspect each component to make sure that nothing is missing and/or damaged. If any of these items is missing or damaged, notify your dealer immediately. Be sure to save the shipping materials and the carton in case you need to ship the Picobook Pro or if you plan to store the Picobook Pro away sometime in the future.

Prepare Your Picobook Pro:

Your Picobook Pro is easy to use right out of the packing box. Just follow the steps 1 to 6 below to have you up and running quickly.

- 1. Remove the contents of the packing box.**
- 2. Insert the battery pack to the battery bay.**

This Picobook Pro provides the most convenient way to install the battery pack into your system. With the extended nose directed toward the compartment, insert and push the battery pack.



Your Picobook Pro

3. Connect the power.

- 3.1 Connect the AC adapter to the DC-in jack on the right side of the Picobook Pro.
- 3.2 Connect the AC power cord to the AC adapter.
- 3.3 Plug the AC power cord into an electrical outlet.



4. Open the display.

- 4.1 Hold the LCD cover.
- 4.2 While holding the LCD cover, lift it upward.



- 5. If operation system (OS) such as Windows XP pre-installed, press the power button to power on. If not, follow the steps below to install OS first.**



★ ***Installing Windows XP***

1. Power on your Picobook Pro.
2. On the screen, when you see

"Press <F2> to enter Setup Menu..."

- press <F2> once immediately.
3. Go to Boot Menu. Use arrow key to select "USB CD/DVD-ROM Drive", then use "+" to move it to the top.
 4. Go to Exit menu and select "Exit Saving Changes".
 5. Insert Windows XP CD-ROM to your Picobook Pro.
 6. Press <Enter>.
 7. A series of windows containing Windows XP installation process will pop up. Follow these guidelines to complete installation.

6. You may need to install drivers such as VGA and Audio. The installation process is described below:**★ *Installing VGA driver:*****Installing VGA device driver for Windows XP**

1. Click the **Start** button, then point to **Run**. The **Run** dialog box appears.
2. Click the **Browse** button and specify the directory as "**E:\Drivers\WinXP\VGA\Setup.exe**".
3. Click "**OK**" to execute the setup program. The **Setup** box appears.
4. Tick the option "**Yes, I want to restart my computer now.**", and press "**Finish**" to restart your system.

★ *Installing Audio driver:***Installing Audio device driver for Windows XP**

1. Click the **Start** button, then point to **Run**. The **Run** dialog box appears.
2. Click the **Browse** button and specify the directory as "**E:\Drivers\WinXP\Audio\Setup.exe**" where the audio driver is located.
3. Click "**OK**" to execute the setup program. The **Setup** box appears.
4. Click "**Next**" three times to continue the following steps.
5. Tick the option "**Yes, I want to restart my computer now.**", and press "**Finish**" to restart your system.

For detailed information about the Picobook Pro, please refer to the User Guide.

